 


**SAMSUNG**

# Operating Instructions

FOR HOUSEHOLD USE ONLY

## ***VACUUM CLEANER***

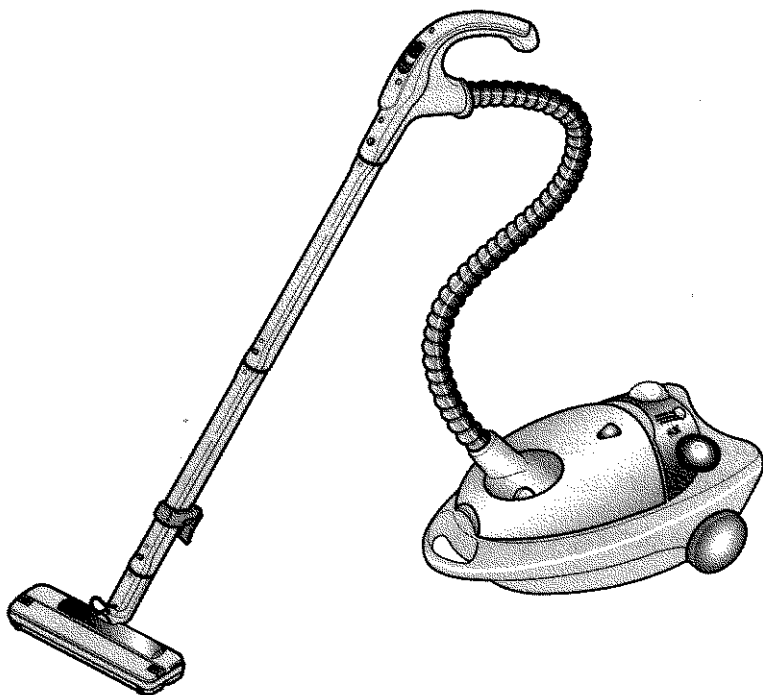

\* Before operating this unit, please read the instructions carefully.

## **IMPORTANT SAFETY INSTRUCTIONS**

When using an electrical appliance, basic precautions should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER**

## **WARNING**

To reduce the risk of fire, electric shock, or injury.

 
1. Do not leave appliance when plugged in, Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliances is not working as it should, has been dropped, damaged, left out door, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

12. Do not use without dust bag and filters in place.
13. Turn off all controls before unplugging.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Store your cleaner indoors in a cool, dry area.
17. Do not use extension cords or outlet with inadequate current carrying capacity.
18. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
19. Unplug electrical appliances before vacuuming them.
20. The hose contain electrical wires. Do not use if damaged, cut, or punctured. Avoid picking up sharp objects.
21. Always turn off this appliances before connecting or disconnecting either hose or motorized nozzle.

## ***SAVE THESE INSTRUCTIONS***

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.


## IDENTIFICATION OF PARTS

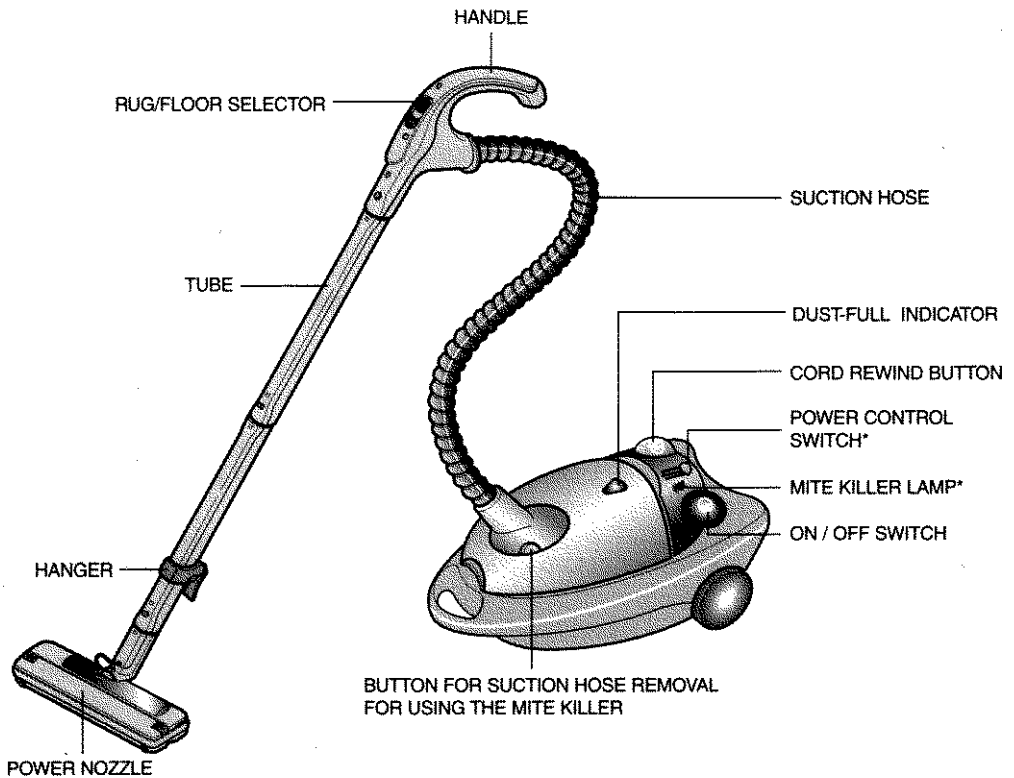

► Features marked \* may vary according to model.

## POWER CONTROL (ONLY SLIDING REGULATOR TYPE)

 Vacuuming power can be adjusted to suit different situations using the power control.



**MIN** = For delicate fabrics, like curtains. **MAX** = For difficult floors and heavily soiled carpets.


## DUST-FULL INDICATOR

 If the "Dust-Full" indicator switches to "RED" while you are cleaning, the dust bag requires replacement.


**NOTE:** If the "Dust - Full" indicator continues to display "RED" even after changing the dust bag turn the cleaner off to see if the hose, tube or nozzle is clogged.

## ASSEMBLING THE VACUUM - CLEANER READY FOR USE


- 1) Connect the suction hose to the suction tube.

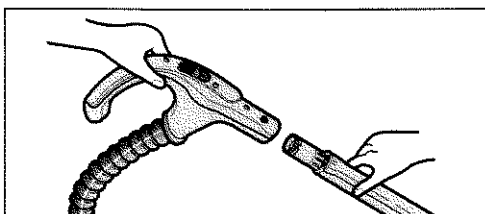

 
- 2) Connect the suction tubes together.

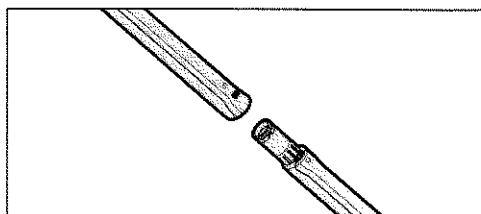

 - 3) Connect the nozzle to the suction tube.

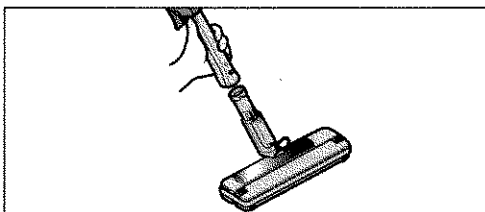

 - 4) Connect the body connector to the body of the cleaner.

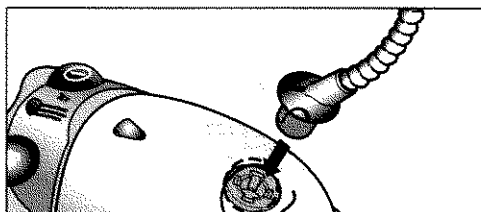


## POWER CORD

### 1) PULLING OUT

The long power cord can be drawn out for your convenience.

### 2) REWINDING

 
After disconnecting the plug from the electrical outlet, press the cord rewind button lightly with your toe. The cord will automatically rewind.

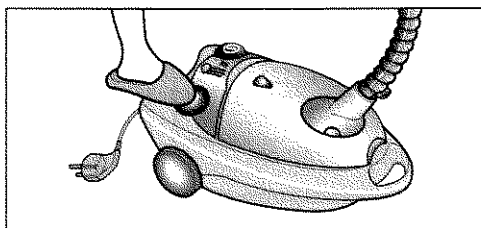

**NOTE:** When removing the power cord from the electrical outlet, grasp the plug, not the cord.


## ON/OFF SWITCH

 You can start or stop your vacuum cleaner by pressing the on/off switch lightly with your toe.

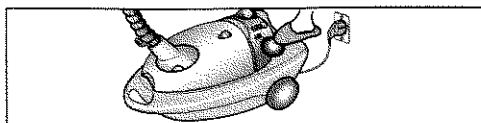


## **PARK POSITION**

 Located in the top rear side of the vacuum-cleaner, there is a nozzle support that can be used to park the nozzle during pauses in cleaning.

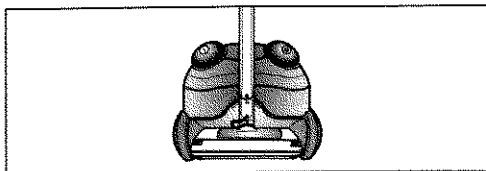


## **TRANSPORTING AND STORING THE VACUUM CLEANER**

 
For easy storage and transportation, this vacuum-cleaner has a clip system built into the body, which will keep the tube, hose and nozzle in a vertical position.

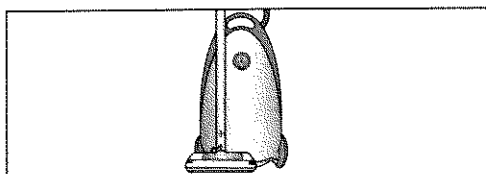


## **USING THE MITE KILLER (OPTIONAL)**

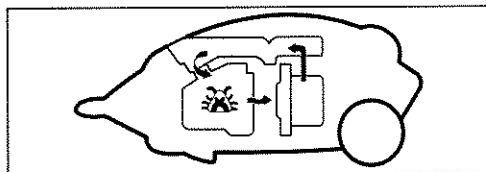 

 
- 1) Turn off the cleaner with pressing on/off button.
- 2) Disconnect the body connector.
- 3) Shut the hose connection cover until it clicks.
- 4) Re-press on/off button to start the mite killing function.  
Mite killer LAMP on.

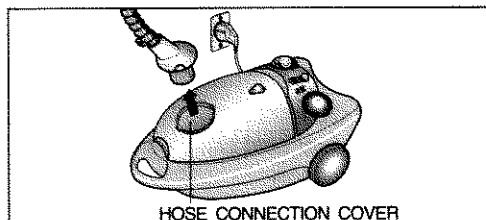

 - 5) It will continue for 2 to 5 min, and stops automatically.

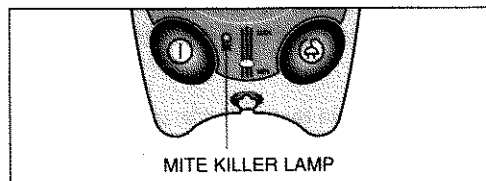


 - 6) If you want to stop the machine while operating, you can either open hose connection cover, press on/off button or unplug the plug.

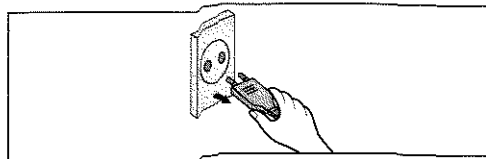


## USING THE ACCESSORIES

 
- Press the tool storage cover downward.
  - \* Crevice tool for radiators, crevice, corners, between cushions.
  - \* Upholstery brush for cushions and drapery.
  - \* Dusting brush for furniture, shelves, books, etc.

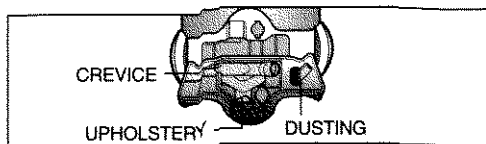

### CREVICE

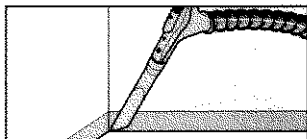 


### DUSTING

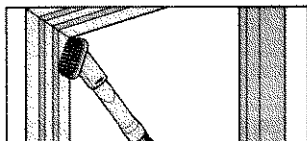 


- Before use, assemble the dusting brush to the crevice tool

### UPHOLSTERY

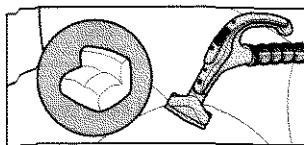 


### DUSTING

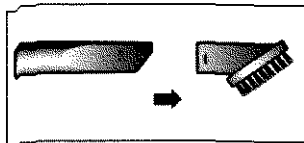 

### POWER NOZZLE


#### • POWER NOZZLE

 - \* The rotating brush ensures that cleaning, is carried out more thoroughly.

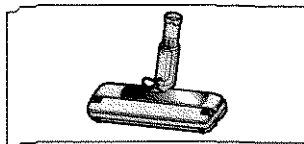


## OPERATING THE POWER NOZZLE

 - Push the switch (A) down.  
(The brush switches on)

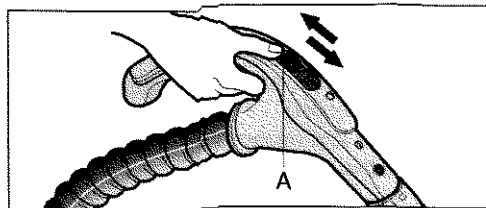

## REPLACING THE DUST BAG

 
- 1) To open the dust cover of the dust bag compartment press the clamber upward located at the front of the dust cover.

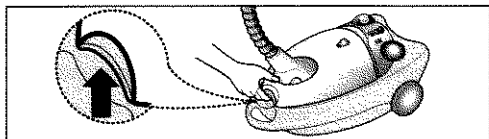


- 2) Remove the carrying bag from the cleaner.



 
- 3) After removing the used dust bag, insert the cardboard bag collar of the new dust bag into the carrying bag.

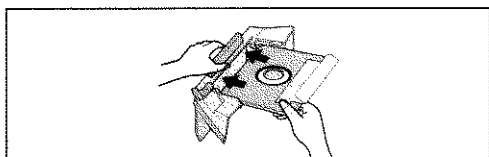

 - 4) Press the dust cover down gently until the clamber relocks.

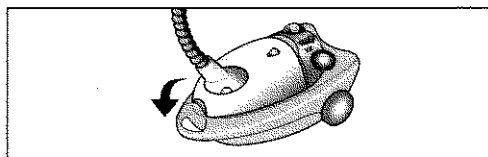

 **NOTE:** Used dust bag can be sealed by removing the film from the paper and sticking the latter over the suction opening. (ONLY PAPER BAG)




## FOR CLOTH FILTER BAG

After using, if the cloth filter bag is full of dust, clean the cloth filter bag and use it again.

## MAINTENANCE OR REPLACEMENT OF THE FILTERS

### 1) INLET-FILTER.

 - Open the dust cover.
- After detaching the filter, wash it lightly with water, dry it in the shade, and then insert it in its original position.
- Close the dust cover.

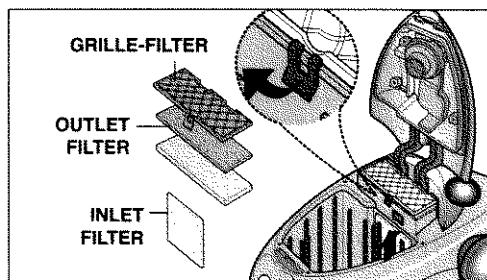

### 2) OUTLET-FILTER.

 
- The outlet-filter which the air comes out from the vacuum-cleaner.
- Open the dust cover, and then pull the hook upward. (The hook is located at the front of the dust cover)
- Remove and replace the exhausted outlet-filter.
- Close the grille filter, and then close the dust cover.



## MAINTENANCE THE POWER NOZZLE


You can change or clean the brush by removing the cover, having first detached it with the 2 slides.

- Remove the brush from the plastic guides and toothed belt and clean, or insert a new brush. Do not lose the plastic guides, washers or springs.

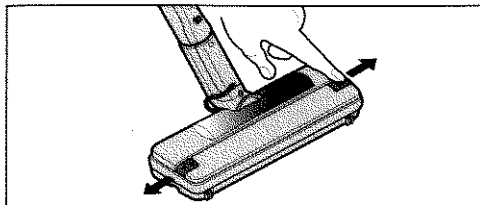

The rubber lip under the brush head can be removed if it requires clearing or replacing.

 - Lift the rubber lip in the middle and pull out of the guides at one side.

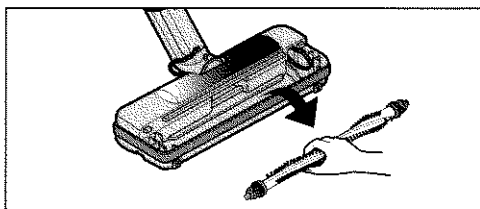

## TROUBLE SHOOTING

PROBLEM	CAUSE	REMEDY
Motor does not start.	No power supply.	Check cable, plug and socket.
Suction force is gradually decreasing.	Filter, nozzle, suction hose or tube is blocked.	Remove the object.
Cord does not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2~3m & push down the cord rewind button.

This Vacuum cleaner is approved the following

EMC Directive : 89/336/EEC, 92/31/EEC and 93/68/EEC

EN 61000-3-2 : 1995, EN 55014 : 1993 and EN 55104 : 1995

Low Voltage Safety Directive : 73/23/EEC and 93/68/EEC

IEC 335-1, IEC 335-2-2, EN 60335-1 and EN 60335-2-2

# MEMO

